



The Realist™
acoustic transducer
Patent 6,018,120


Mandolin Installation Instructions

1. Clamp Jack to the mandolin. The assembly attaches to the rib, placing the jack on the instrument's back. Use metal tool (provided) to tighten.



2. Loosen all of the mandolin's strings.

3. Place the bridge element beside the bridge so that silver dots are inside the bridge posts.

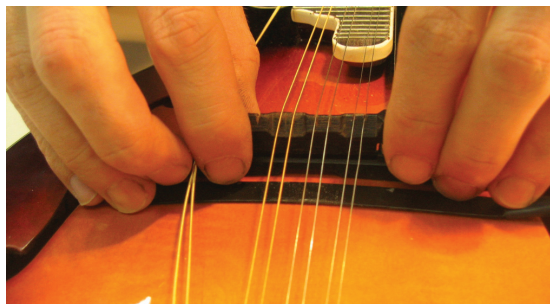

4. Lift the bridge with both hands and slide the element under. If necessary, remove lowest strings for installation.

